

---

# WICANDERS



INSTALLATION INSTRUCTIONS  
FOR WICANDERS WOOD INFINITUS

---

AMORIM CORK FLOORING

# INSTALLATION INSTRUCTIONS FOR WICANDERS WOOD INFINITUS

**WICANDERS**

## (Preparation)

### Subfloor requirements

Please inspect the planks in daylight for any visible faults or damage. Also check if the subfloor and site conditions are in accordance with the specifications described within these instructions. Can be installed in all domestic areas and in most commercial areas, except in saunas and permanent wet areas.

It is possible to use Wicanders Wood Infinitus in other areas like bathrooms, or areas where spilla-ges frequently occur since it will not swell when exposed to water.

However, in order to prevent the water to penetrate under the installed floor (which can create conditions for growing of fungus, mold or smell), a polyurethane sealant must be applied on expansion joints. Wicanders floors are suitable for indoor use only.

Wicanders Wood Infinitus can be installed on top of most hard surfaces such as resilient floor cove-rings and ceramic tiles which are sufficiently fixed, completely levelled and have no loose areas. Soft subfloors such as carpets and similar must be removed.

For Wicanders Wood Infinitus installation no underlay is required.

Old resilient floor coverings (like pvc, linoleum, cork...) must be glued without loose areas.

### Radiant-Heated Subfloors:

For Wicanders Wood Infinitus the temperature of the subfloor must not exceed 28°C (82°F). For detailed information, follow the instructions supplied by the subfloor heating system manufacturer/contractor, or contact your supplier.

Remember that rugs or mats placed on top of the floor may function as heat accumulators and will increase the floor surface temperature more than the maximum surface temperature recommended (must not exceed 20-22 °C (68°F-72°F)).

Any Heated Subfloor has certain working conditions depending on the heating system and the subfloor.

In order to avoid problems with functioning and durability during the construction phase, the norms and rules concerning installation are to be followed very strictly.

The drying of a heated subfloor has to be made by turning the heating on/off with a pause before installation of the floor, following a documented protocol. After that you can begin the "heating phase".

The beginning of the heating phase in concrete subfloors is to be made not before 21 days after complete curing of the substrate. The heating phase has to begin with running temperature of 25°C (78°F) during 3 days.

The subfloor should be in place and cured for at least 60-90 days.

The temperature should then be increased each day until the maximum temperature allowed according to the manufacturer system. This maximum value should be kept for at least 72 hours and maintained for 5-7 days without turning it off. The decrease of temperature is made by reducing it gradually every day until 18°C (65°F) on the surface is achieved.

During the installation, the temperature of the surface should not exceed 18°C (65°F) and should be kept for 3 days after finishing the installation (for floating floors). Then the temperature should be increased slowly to a max. of 28°C (82°F) on the subfloor surface.

### Wicanders Wood Infinitus on wooden floor / chipboard / OSB.

In case of installation on a wooden subfloor, please remove any existing floor covering first. No signs of mould and/or insect infestations should be visible. Make sure that the plywood and OSB subfloor are mechanically fixed (screw), make sure that they are stable and show no movement anytime and at the same time the joints be-tween the panels are even and firmly closed.

Existing laminate flooring, wood planks or engineered wood planks must be free of ten-sions. If there are any visible open seams and/ or height differences between panels than needs to be entirely removed. Existing wood planks, engineered wood boards, OSB panels, drywall elements etc. must not be covered with PE foil acting as a vapour barrier. The area below the floor should also be sufficiently ventilated in an adequate way (back-vented skirting board) to maintain the equilibrium moisture content of the wood planks, engineered wood boards, OSB panels, drywall elements. The crawl space under the wooden subfloor must be sufficiently ventilated. Remove any obstacles from the crawl space and make sure there is sufficient ventilation (minimum 4cm<sup>2</sup> (0.62" <sup>2</sup>) total ventilation openings per 1m<sup>2</sup> (3sqft) of flooring). The mois-ture content of the wood must not exceed 10%.

### Wicanders Wood Infinitus on ceramic tile floors

The maximum joint should not be wider than 2mm (0.08"), and 1mm (0.04") depth. If this is not the case, or if there is any kind of embossing, skim coat the grout lines with a floor leveller).

All types of concrete, ceramic subfloors must be even, dry, variations should not exceed 5mm in 2m (0.20" in 6.6 feet) and flat.

## (Prior to installation)

### Transport, storage and acclimatization

Transport and store the cartons horizontally.

Packed tiles should be acclimatized at the job site in a dry, well-ventilated area for a minimum of 24 hours so that flooring may acclimate.

Remove tiles from packages just before starting the installation.

During storage and installation, maintain temperature and relative humidity to a level consistent with the conditions which will prevail when the building is occupied. In most cases, this means maintaining a temperature range from 18°C to 28°C (65°F to 82°F) and relative humidity range from 35% to 65%. In order to reach this climate, use heating or air conditioning in the appropriate duration of time before starting the installation.

Wicanders shade variation is an inherent and attractive characteristic. To achieve the most pleasant blend of shades, shuffle the planks before installation.

### Site inspection

Prior to installation, please inspect the tiles in daylight for any visible faults or damage, and also check if the subfloor and site conditions are in accordance with the specifications described within these instructions.

Amorim Cork Flooring cannot be held responsible for claims associated with improper subfloors, improper applications, adhesives, varnishes and the use of maintenance products not recommended, or detectable defects verifiable prior to installation.

### Expansion Gaps

Wicanders Wood Infinitus are installed as a "floating floors", so the planks should not be fixed to the subfloor.

The skirting boards/mouldings cannot be pressed down, not restricting the movement of the floor. Also provide 5mm (0.2") expansion gaps to the walls and other fixed objects. Skirting boards/mouldings should cover minimum 7mm (0.28") of the floor.


Transitions between two rooms and asymmetrical floor areas require extra expansion gaps in floor areas superior to 325m<sup>2</sup> (3500 sqft) or with dimensions bigger than 18m (60 feet) in either direction.

## (During installation)

### Installation with excessive heat or direct sunlight

Installation with excessive heat or direct sunlight Wicanders Wood Infinitus floors should be protected from heat and sunlight by the use of curtains and or blinds. Wicanders Wood Infinitus floors must not be exposed to excessive heat ≥45°C /110 °F.

### Tools required

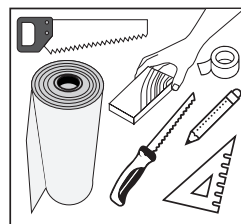

Tape measure, craft knife, pencil, straight edge, chalk line.

### Moisture Protection

Wicanders Wood Infinitus is waterproof and reliably secures the flooring panels on all four sides. However, excessive moisture in the subfloor could promote mold, mildew, and other moisture related issues like the trapping of moisture emissions under the flooring, which may contribute to an unhealthy indoor environment.

Additional layer of 0.15 mm (150 microns) PE foil or equal vapour barrier with a perm rating of 1 or less may be used as an additional layer of protection.

The moisture content of the cement/concrete subfloor must be less than 2,5%CM / 75%RH (cement screed) or less than 0,5%CM / 50%RH (anhydrite screed - subfloor). In the case of floor heating, results must be respectively 1,5%CM / 60%RH and 0,3%CM / 40%RH. Always measure, record and keep your moisture content results. A new cement screed floor must dry at least 1 week per 1cm (3/8") thickness up to 4cm (1-1/2"). Thick-nesses over 4cm (1-1/2") require twice as much drying time. For example, a 6cm (2-1/2") concrete subfloor must dry at least 8 weeks. As the drying times are really depending on the climate conditions and the ventilation of the building, these timings are only indicative.




# INSTALLATION INSTRUCTIONS FOR WICANDERS WOOD INFINITUS

**WICANDERS**




On wooden floors, we recommend laying WICANDERS Wood Inifinitus floors crossways to the existing floorboard. WICANDERS Wood Inifinitus 5Gi locking system are easy to install. We recommend to start installation in the right-hand corner.

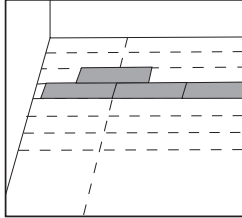


1

Measure the room accurately, at right angle to the direction of the planks. The planks in the final row should be at least 5cm (2") wide. If necessary, the planks in the first row can be cut to a smaller size.

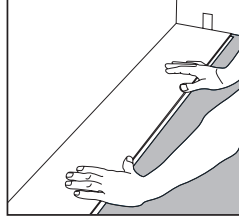


2

Turn the tongue side of the plank facing the wall. Maintain a gap of 5mm (0.2") on the short side.

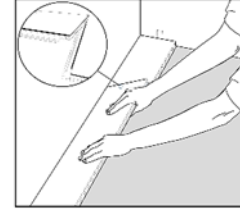


3

Hold the next plank against the first matching the corners and fold it down

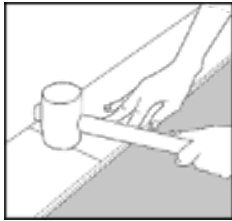


4

Press it down and tap slightly with a rubber hammer.

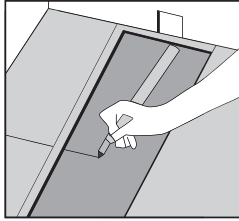


5

Cut the final plank of the first row to the correct length. Place the final plank face down and the short side without the locking strip towards the wall. The distance to the wall should be 5mm (0.2").

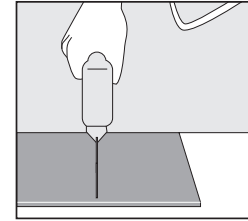

6

Mark where the plank is to be cut and place it on the work surface and cut to size using any kind of saw.

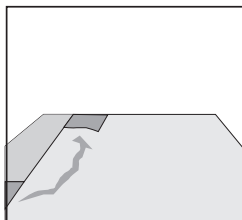

7


Make sure that the long sides of the planks make a straight line. Use the cut piece of the plank from the previous row to start the next one. However it must be at least 30cm (12") long. If the piece is too short, start with a new board and cut it in half. Always ensure that the end joints are staggered at least 30cm (12"). Tiles with 605 x 445 (23-7/8" x 17-1/2"), "brick" or "half brick" installation method must be used.



8


Place the first plank of the new row with the tongue side at an angle against the groove side of the plank in the previous row.

Press forward and lay it flat at the same time.

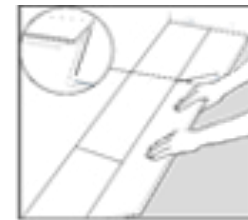


9

Place the second plank with the tongue side at an angle against the groove side of the plank in the previous row and the short side tite to the previous plank. Ensure that the plank is positioned on the integral locking strip of the plank in the previous row and no joint is noticed between the short sides and press forward and lay it flat at the same time slightly tap with a rubber hammer.

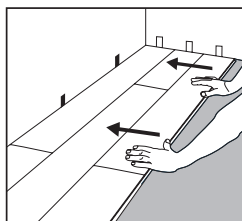


10

Adjust the distance to the wall to 5mm (0.2") when three rows are complete.

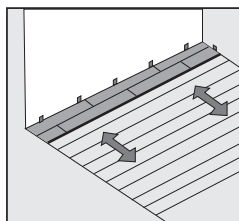

11

Proceed the installation as described above until reaching the opposite wall.

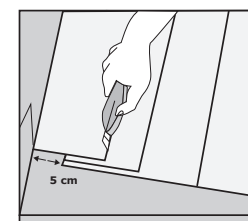

12


Measure and cut the planks in the last row to the correct size. Allow for a 5mm (0.2") distance to the wall. No plank should be less than 5cm (2") wide.

# INSTALLATION INSTRUCTIONS FOR WICANDERS WOOD INFINITUS


**WICANDERS**

## *(Uneven walls)*

Sometimes the first row must be cut to match an uneven wall.

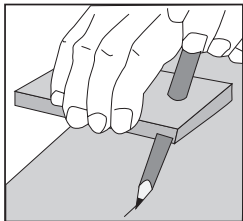

Transfer the shape of the wall to the planks. Do not forget to allow 5mm (0.2") for the expansion gap.

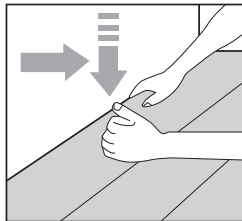


To remove the first row, lift the plank a few centimetres and tap along the joint.

Cut the planks as required.


## *(Installation around doors, radiators and last row)*

If you cannot angle the tile under (e.g. a doorframe) or low fitted radiator, you can do as the picture shows:

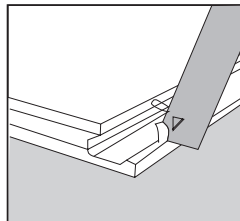


cut away the locking edge and apply Glue (PVA Glue, class D3) on the groove and install the plank

## *(Heating Pipes)*

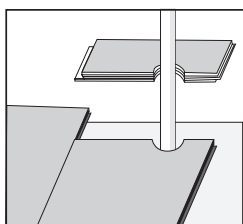


Drill the required holes in the planks, making a hole on the plank 10mm (0.4") bigger than the pipe diameter.

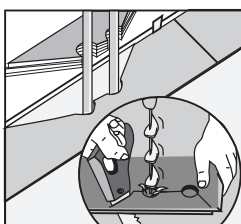

Cut the plank with a 45° angle towards the hole. The cut-off piece is glued in the position again. Cover the hole with a pipe sleeve.

## *(Door Frames)*

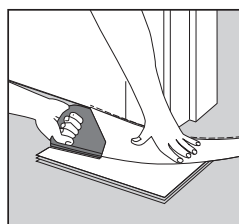


If a door frame needs to be cut, use a piece of plank to obtain the correct height.

Saw the door frame and architrave to the required height allowing for 2mm (0.08") of space to the planks.


The planks can be laid from all directions. This makes easier to plan the installation e.g. around doors.

## *(After installation)*

### *Removing the floor*

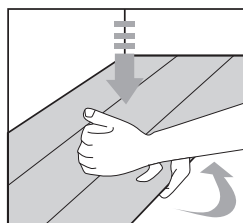

If you wish to uninstall the floor, just lift the planks a few centimetres and tap along the joint.

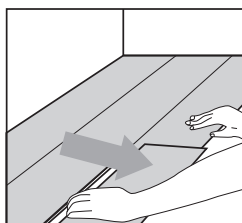

The released plank can then be pulled out. Never bend connected plank backwards, as this will damage the planks.